

LUX H8 Install

On a E92, E93, or M3


Tools Needed:

Standard (slotted) screw driver

Installation:



Open the Hood

Remove the cop cover of the headlight by using the screw driver. Insert the screw driver into the slot here.

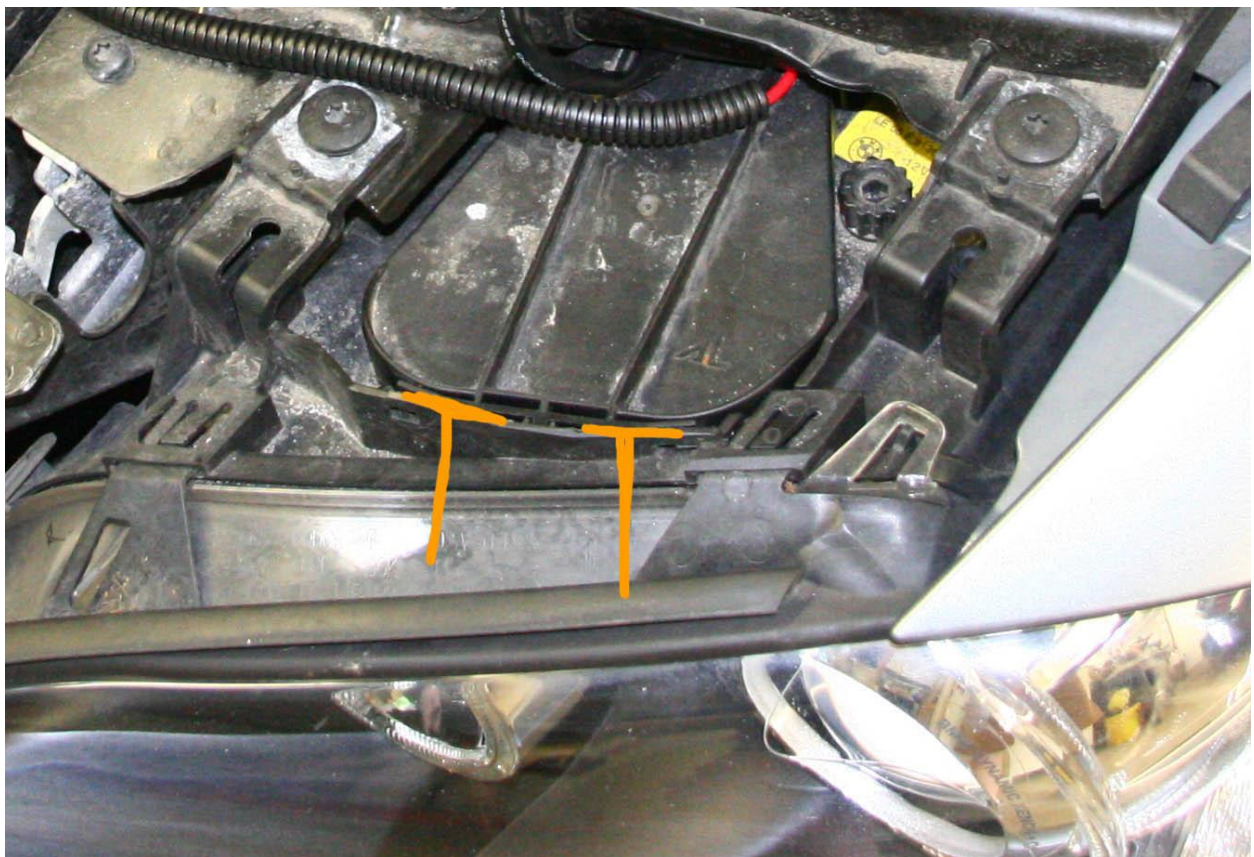

Upon removing the cover – twist the bulb and remove it. Disconnect the bulb by releasing the 2 tabs on the outside.

Once removed, plug in the LUX H8 by lining up the tabs shown in this picture.

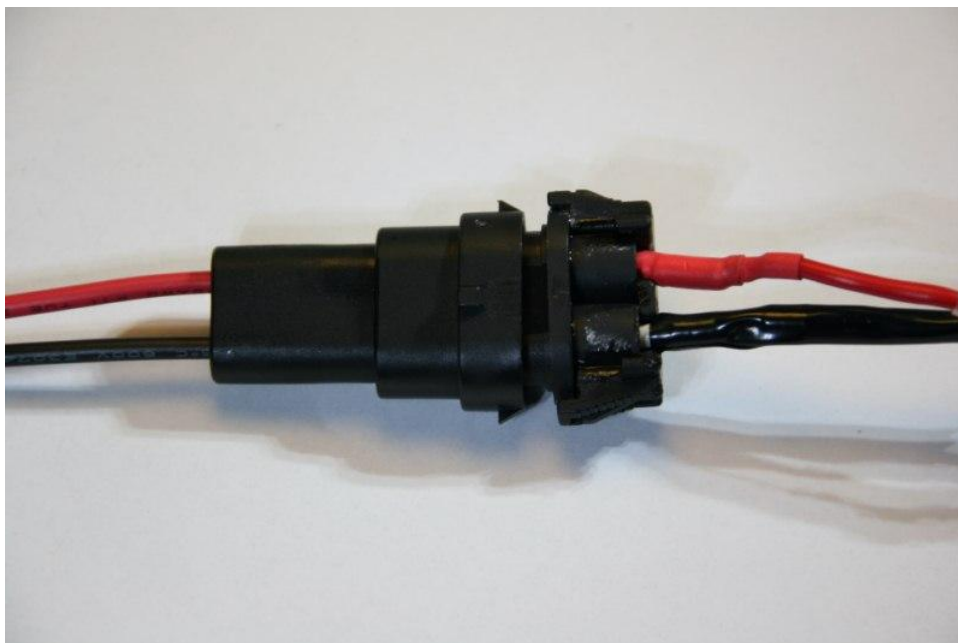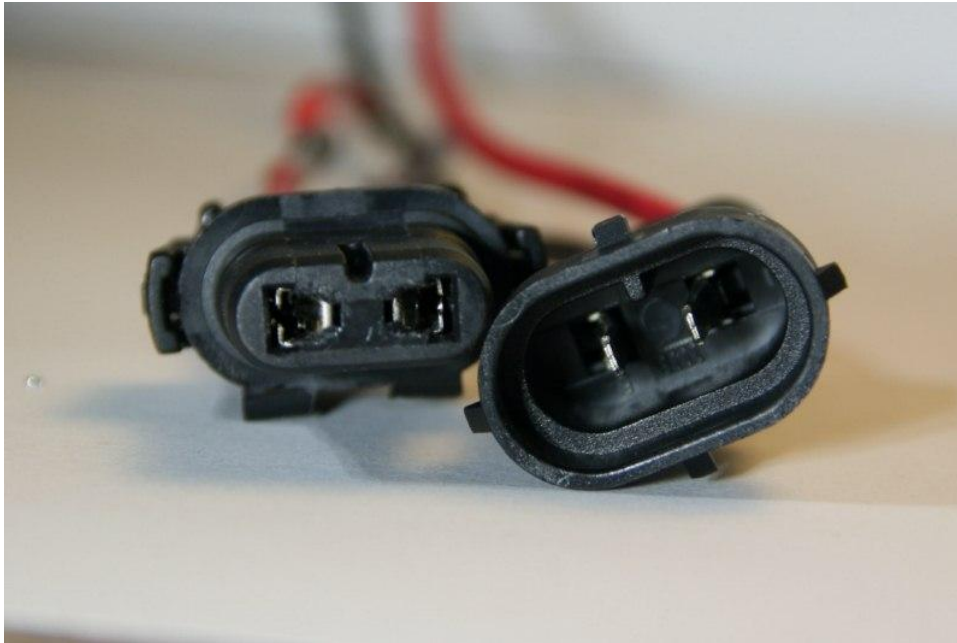

Next – insert the LUX H8 into the headlight. You will need to twist it until it falls into place. Once in place, twist it until the light is tight.

Replace the top cover and your done.